SMART Airliner Slate

Models 100 and 200 Installation

Step #1: Connect the Airliner Slate USB Bluetooth Receiver.

- Plug in the Bluetooth Receiver in an empty USB port.
- Windows 7 will recognize the Receiver and install the device.

Step #2: Verify that the SMART Notebook software and the SMART Product Drivers are installed.

- Start Button
- Control Panel
- Get Programs
- If you have not already installed the following application, do so now.

Smart Notebook 10.8 – SD - Smart Notebook 10.8

Step #3: Make the connection to the Airliner Device.

- Turn on the Airliner Device via the Power Button on the front of the Airliner.
- Press the "***Connect***" button on the ***BACK of the Airliner***, to cause the power button to begin to ***BLINK/FLASH*** the blue light.
- While the blue light is flashing, ***click the small arrow key*** "Show Hidden Icons" in the Task Tray, as shown below.

- ***Right-click*** the Bluetooth Device icon, as shown below. Choose ***ADD a DEVICE***.

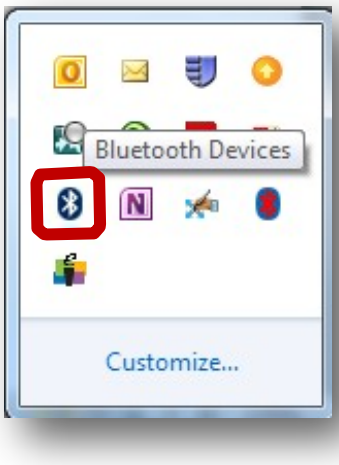

- Wait a few minutes if necessary until your computer discovers the SMART Wireless Slate device, as shown below. **Select the device** and click ***Next***.

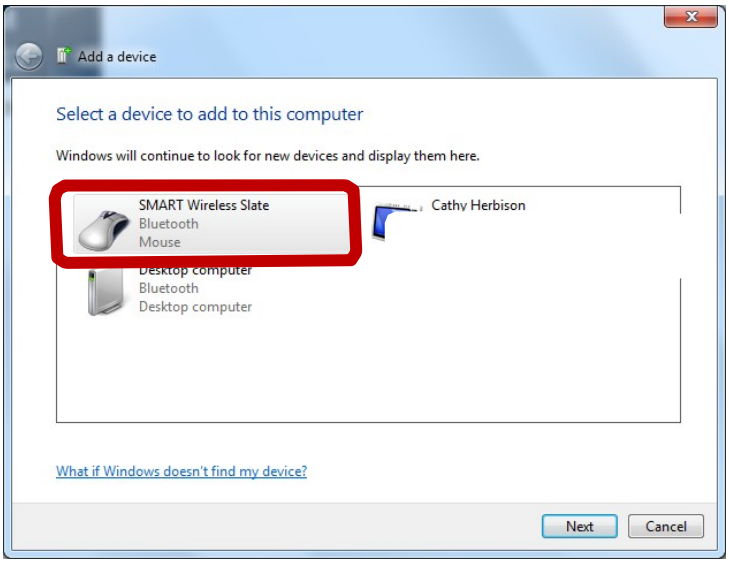

- The computer begins to configure the device and connects the Bluetooth HID Device (Airliner Slate).

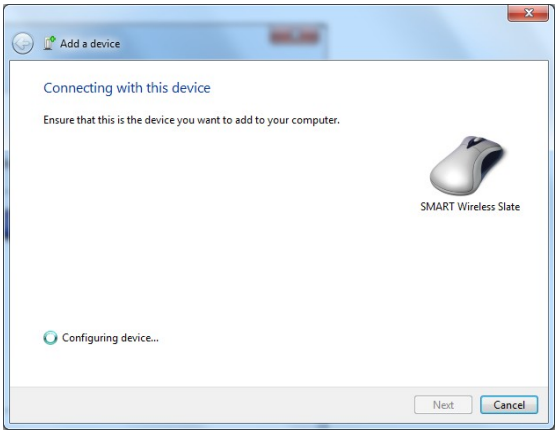

- When the device is installed, you will see the following dialog box. Windows 7 may also need another minute to fully install the device drivers – check the Task Tray for this notice. Click ***Close***.

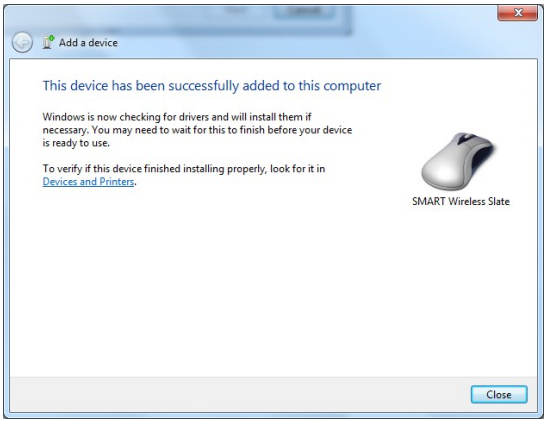
Add a device
This device has been successfully added to this computer
Windows is now checking for drivers and will install them if necessary. You may need to wait for this to finish before your device is ready to use.
To verify if this device finished installing properly, look for it in Devices and Printers.
SMART Wireless Slate
Close

- Your Airliner Device should now be connected.

If you have **SMART** Airliner Slate Model **WS200** you need to do the following also:

1. Back on the Bluetooth devices window your ws200 will be there but greyed out. Right click on that mouse and left click properties.

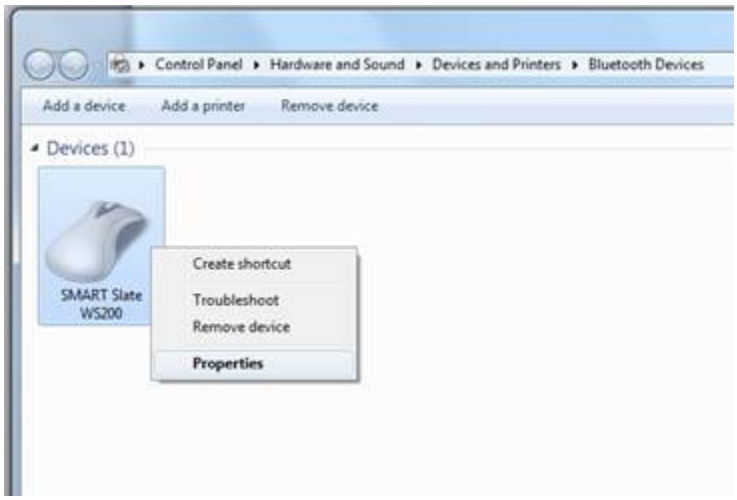

2. At the top of the new window there will be tabs, left click on the services tab, and then check the unchecked box that says “Drivers for keyboards, mice, etc.(HID)” then click apply. After a few seconds your board will connect and become active.

3. Restart your computer after this is finished

Step #3: ***If your pens and tools on the Airliner Underlay are not working*** **do the following to configure them to work properly.**

- Start the SMART Notebook software.
- Click the "show hidden icons" arrow in the Task Tray. Click the SMART Notebook/SMART Board icon and then select "Control Panel."

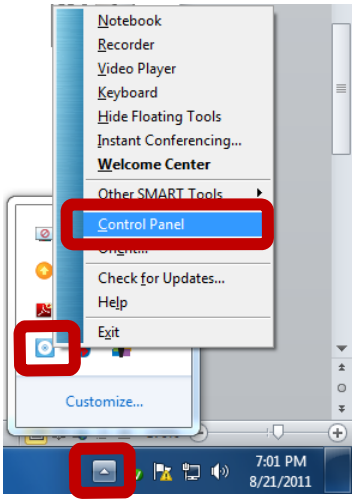

- Select "***SMART Hardware Settings.***" Select "***Set Up Underlay and Icon Strip.***" Select "***Configure Icon Strip***."

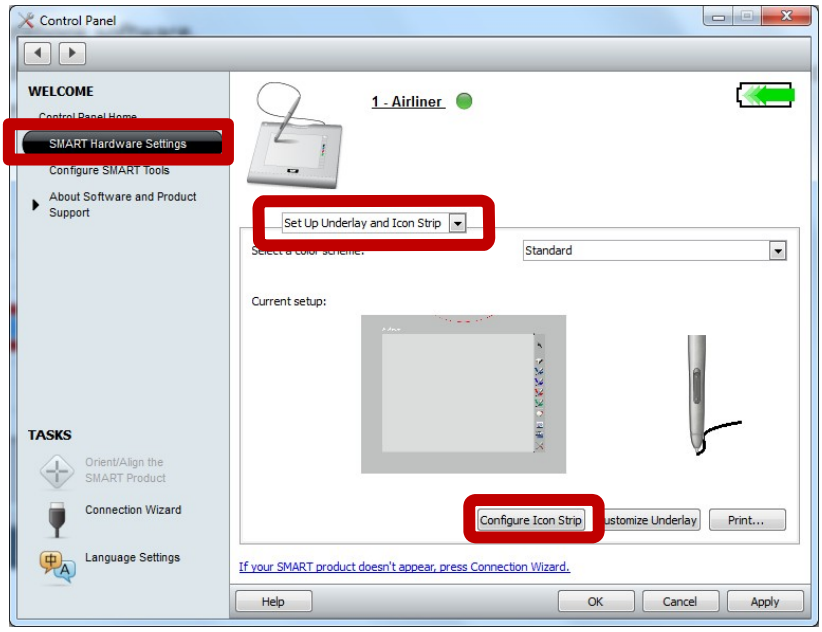

- ***Click on a Pen in the right column (Current Toolbar) and choose Remove.***
  Click The Tools TAB in the left column (Available Tools), and add a pen back.
  Drag the new pen up to the former location so that the icons in the view below match the icons on the Airliner underlay.

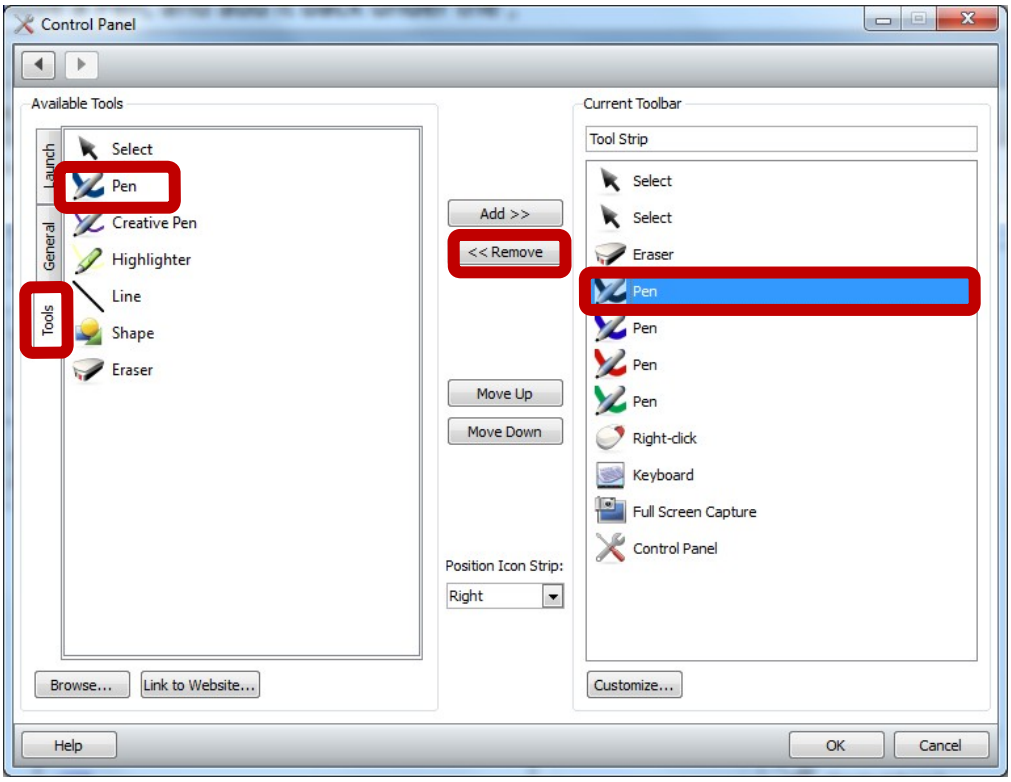

- Click **OK**.
- Click **APPLY** and **OK**.
- **Restart your computer.**
- Your tools on the Airliner Slate underlay should now work.

- Contact the **HELP DESK** if you need further assistance.